TY PENNINGTON Style™

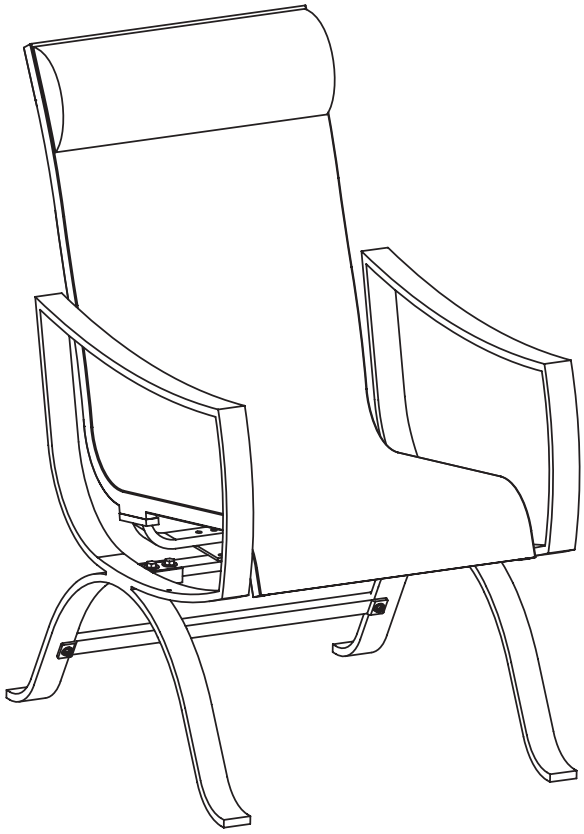

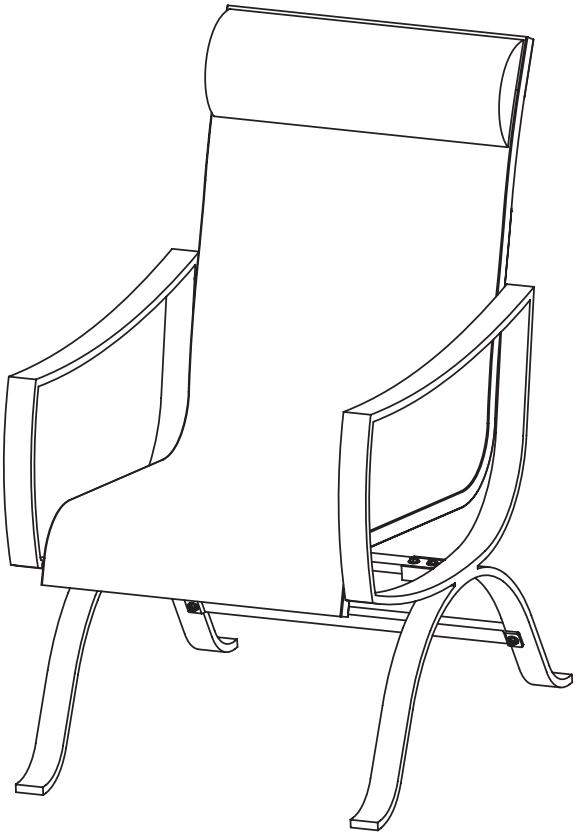

Owner's Manual

KESEY 7 PIECE DINING SET

Product code: D71 M25780
UPC code: 769455 764447
Vendor Item: AS-K-233A/6

Date of purchase: _____/ _____/ _____

PARTS

Read through all the instructions before beginning assembly. Unpack and identify all the parts. Place them on a flat, non-abrasive surface. Assembly by two people is recommended.

ITEM	DESCRIPTION	QUANTITY
A1	Action Chair Left Arm	2
A2	Action Chair Right Arm	2
B	Action Chair Connect Bar	2
C	Action Chair Sling Seat and Back	2
D1	Chair Left Arm	4
D2	Chair Right Arm	4
E	Chair Sling Seat and Back	4
F	Chair Connect Bar	4
G	Chair Rear Connect Bar	4

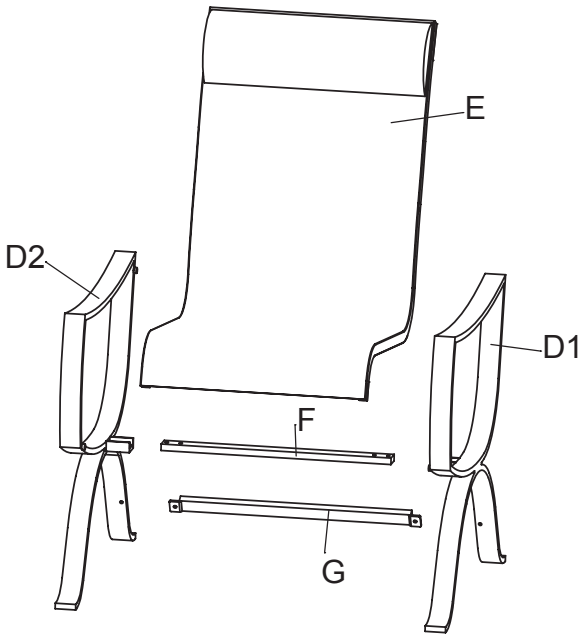

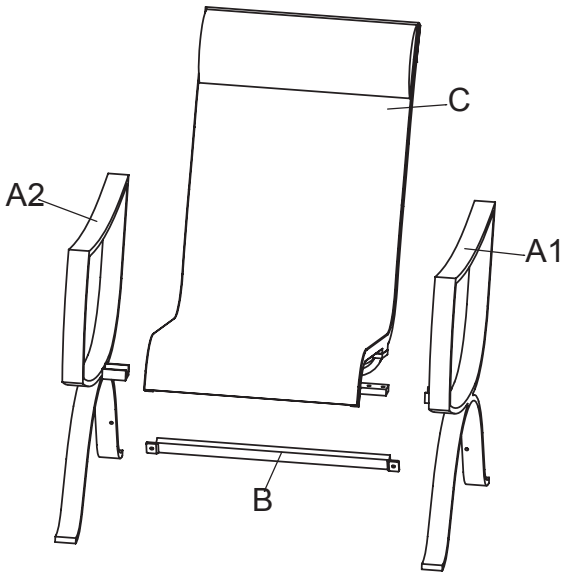

ACCESSORIES

Ha (12+1 spare)
M6 Short Bolt

Hb (16+1 spare)
M6 Medium Bolt

Hc (16+1 spare)
M6 Long Bolt



Hd (8+1 spare)
M8 Bolt



He (60)
M6 Metal Washer

Hf (16)
M8 Metal Washer

Hg (8+1 spare)
M8 Locker

Hh (16+1 spare)
M6 Nut

Hi (8+1 spare)
M8 Nut

Hj (2)
Open Hex Wrench

Hk (2)
Allen Wrench

Hl (1)
Hex Wrench



Hm (1)
Assembly
Instructions Sheet



ASSEMBLY INSTRUCTIONS

ACTION CHAIR ASSEMBLY

1

Hd x 4
M8 Bolt



Hf x 8
M8 Metal Washer

Hg x 4
M8 Locker

Hi x 4
M8 Nut

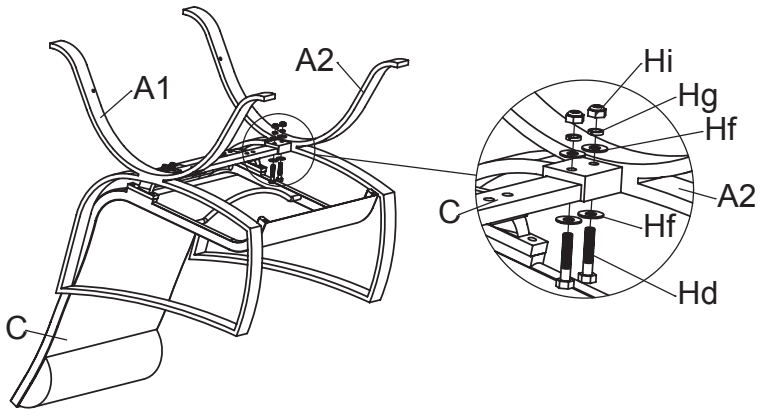

Don’t tighten completely.
Repeat procedure for the other side.

2

Ha x 2
M6 Short Bolt

He x 2
M6 Metal Washer

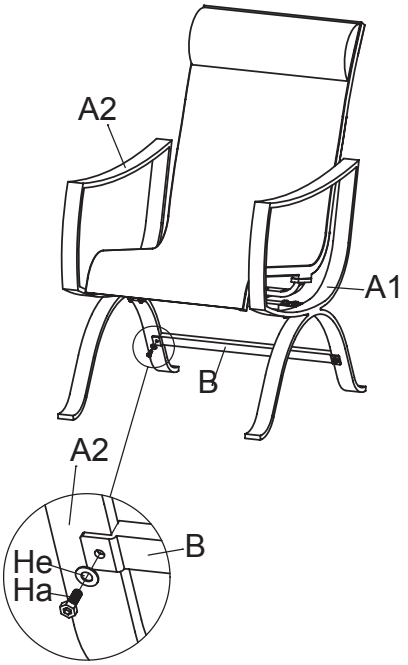

Don’t tighten completely.
Repeat procedure for the other side.

3

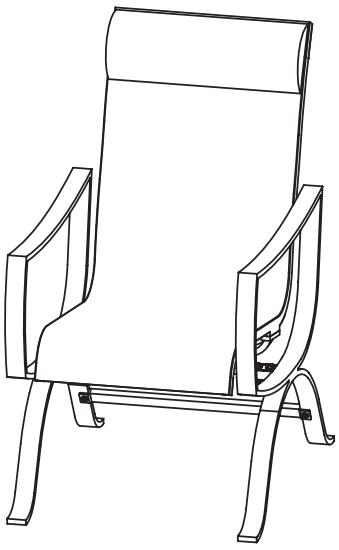

Securely tighten all bolts.
Repeat procedure for the other action chairs.

CHAIR ASSEMBLY

4

Hc x 4
M6 Long Bolt



He x 8
M6 Metal Washer

Hh x 4
M6 Nut

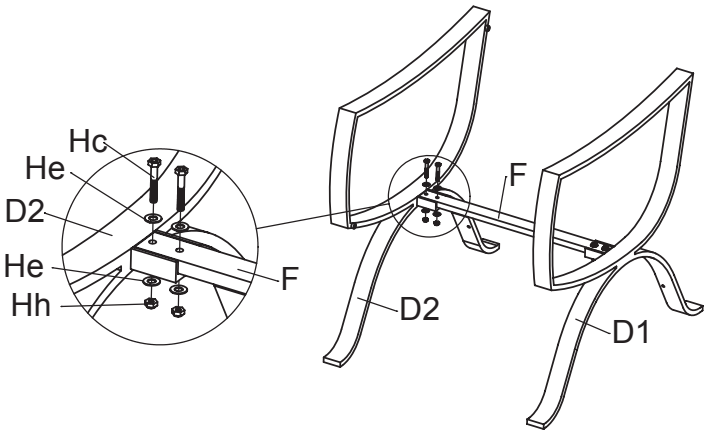

Don’t tighten completely.

Repeat procedure for the other side.

5

Hb x 4
M6 Medium Bolt

He x 4
M6 Metal Washer

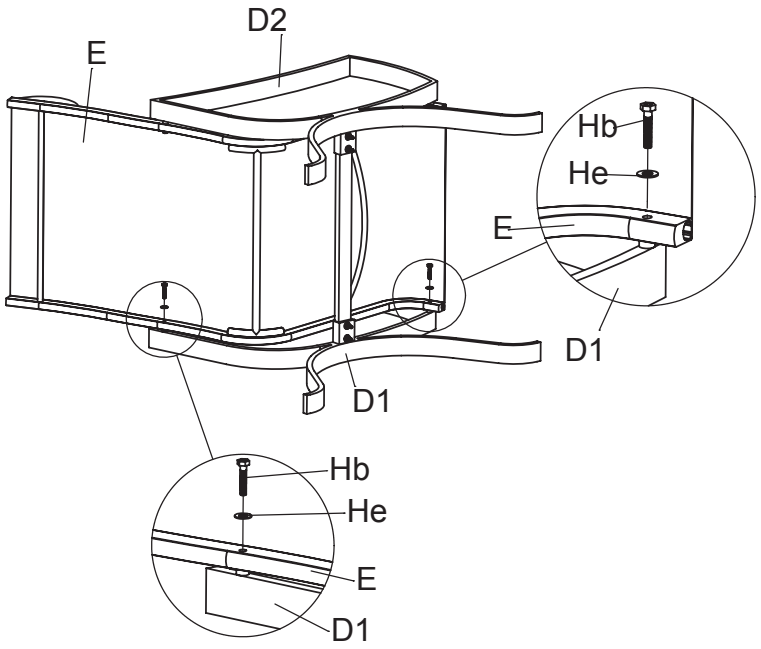

Don’t tighten completely.

Repeat procedure for the other side.

6

Ha x 2
M6 Short Bolt

He x 2
M6 Metal Washer

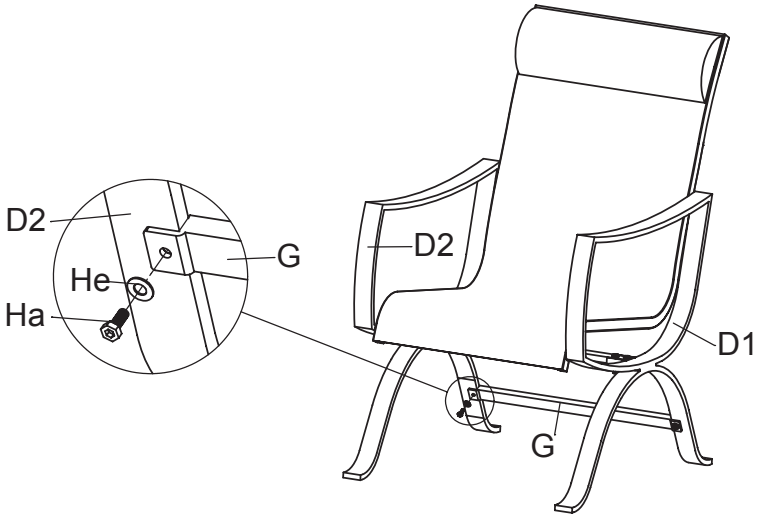

Don't tighten completely.
Repeat procedure for the other side.

7

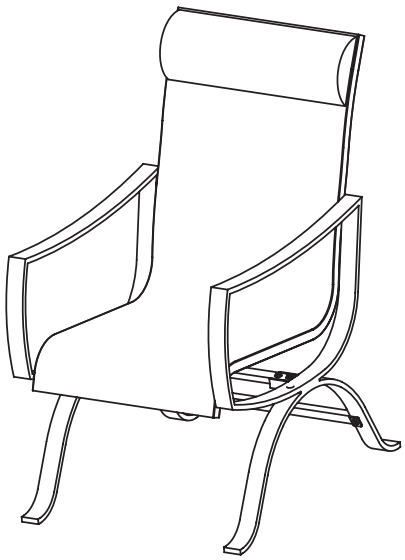

Securely tighten all bolts.
Repeat procedure for the remaining three chairs.
Your chairs are now ready to use.

CARE INSTRUCTIONS

Wash with a mild solution of soap and water; rinse thoroughly. Dry completely. Do not use bleach or solvents.

Cover furniture with outdoor furniture covers when not in use.

sears

Please refer to part numbers when reordering

For questions or comments about product:
Call toll-free: 1-800-457-4652

Made in / Hech en CHINA
Distributed by Sears, Roebuck and Co., Hoffman Estates, IL 60179

See our extensive assortment of outdoor living products
on-line at www.sears.com and www.kmart.com

TY PENNINGTON Style™

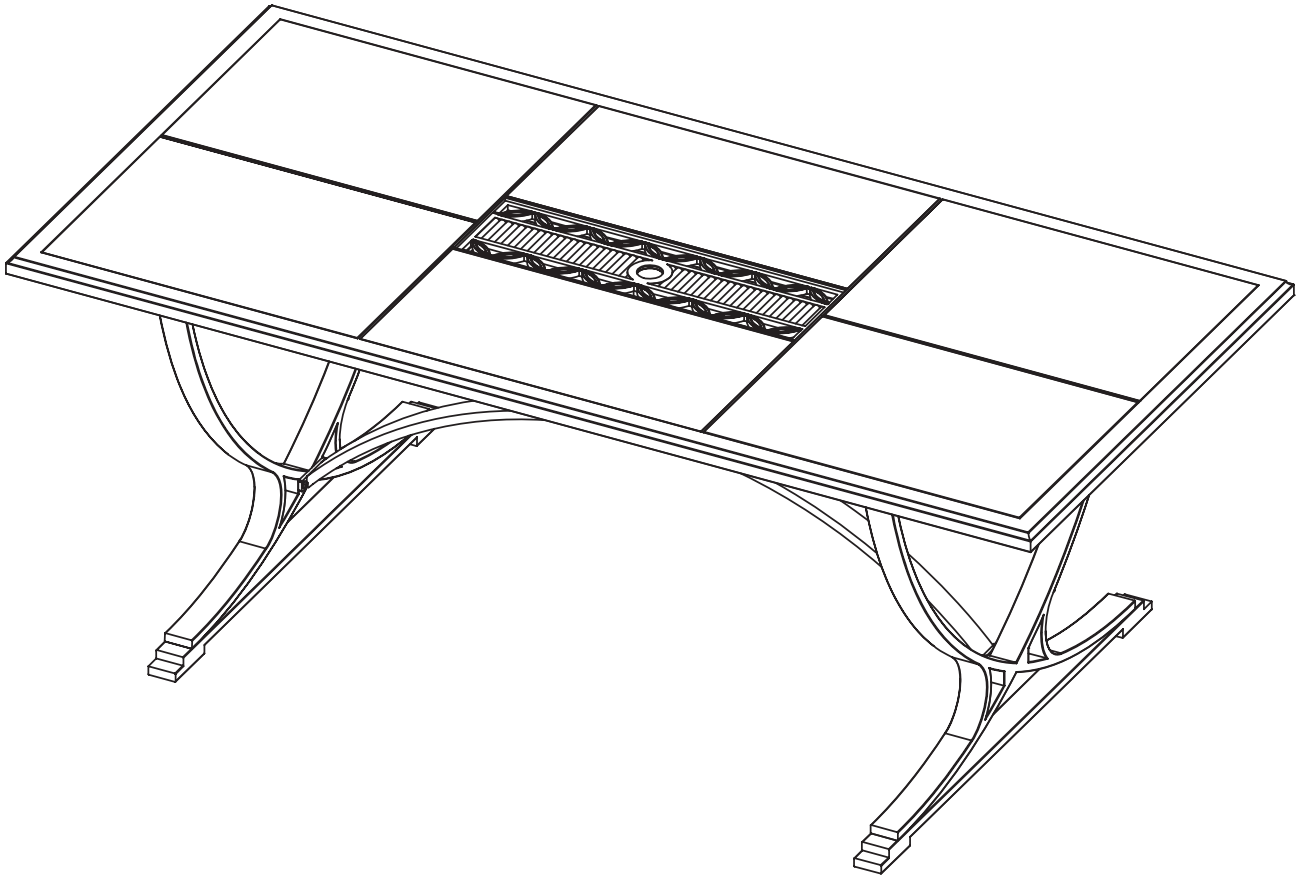

Owner's Manual

KESEY 7PC DINING SET

Product code: D71 M25780
UPC code: 769455 764447
Vendor Item: AS-K-233TD

Date of purchase: _____/ _____/ _____

PARTS

Read through all the instructions before beginning assembly. Unpack and identify all the parts. Place them on a flat, non-abrasive surface. Assembly by two people is recommended.

ITEM	DESCRIPTION	QUANTITY
A	Table Rim (8 Metal Washers and 8 Bolts attached)	1
B	Metal Leg (2 Metal Washers and 2 Bolts attached for each)	2
C	Support Bar	1
D	Big Tile	4
E	Small Tile	2

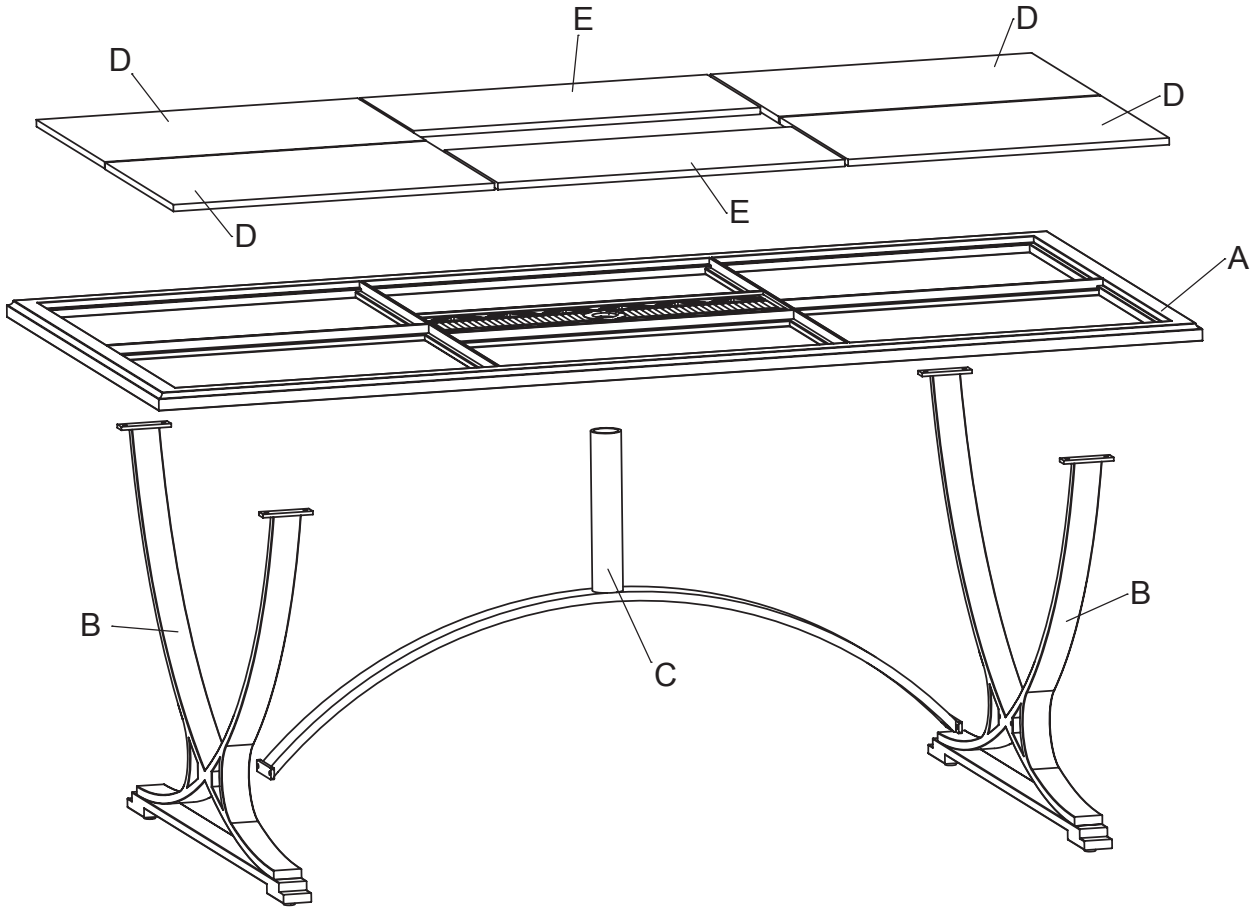

ACCESSORIES

Fa (1 spare)
Bolt



Fb (6 spares)
Tile Bumper



Fc (1)
Allen Wrench

Fd (1)
Assembly
Instructions Sheet



ASSEMBLY INSTRUCTIONS

1

Fa x 8
Bolt
(remove from the table rim)



Metal Washer x 8
(remove from the table rim)

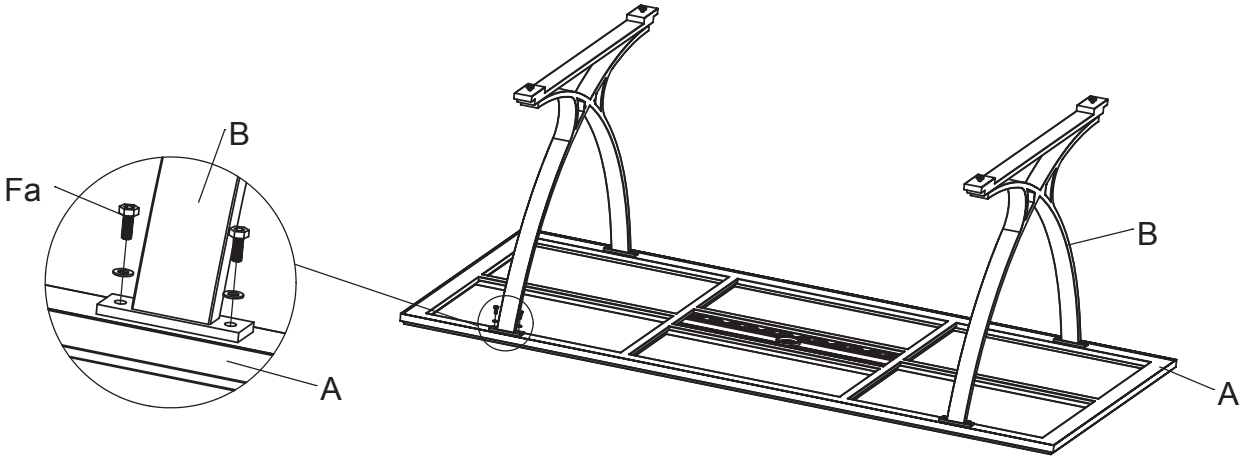

Don’t tighten completely.
Repeat procedure for the other side of leg.

2

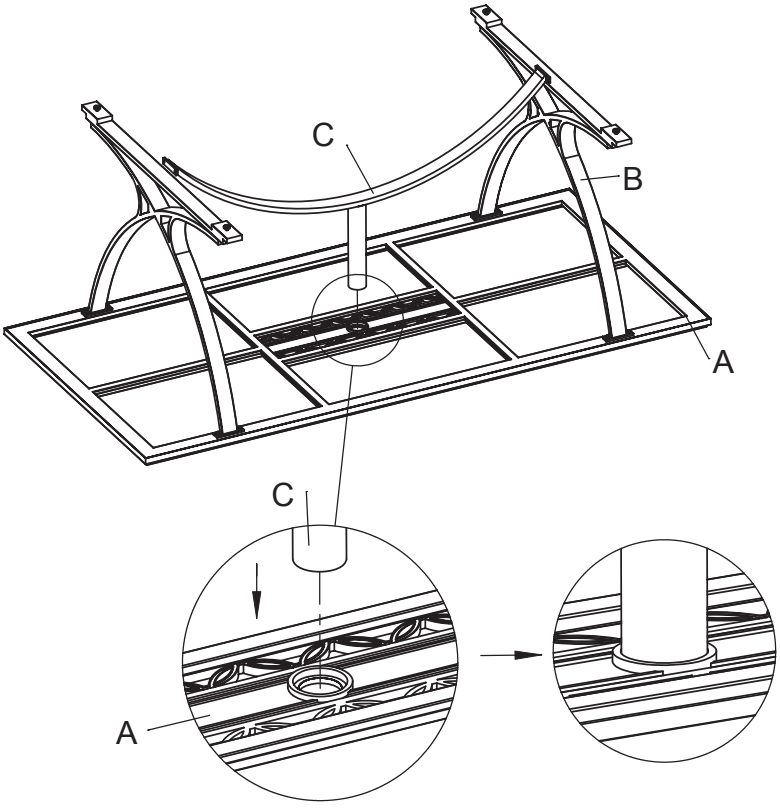

3

Fa x 4
Bolt
(remove from the leg)

Metal Washer x 4
(remove from the leg)

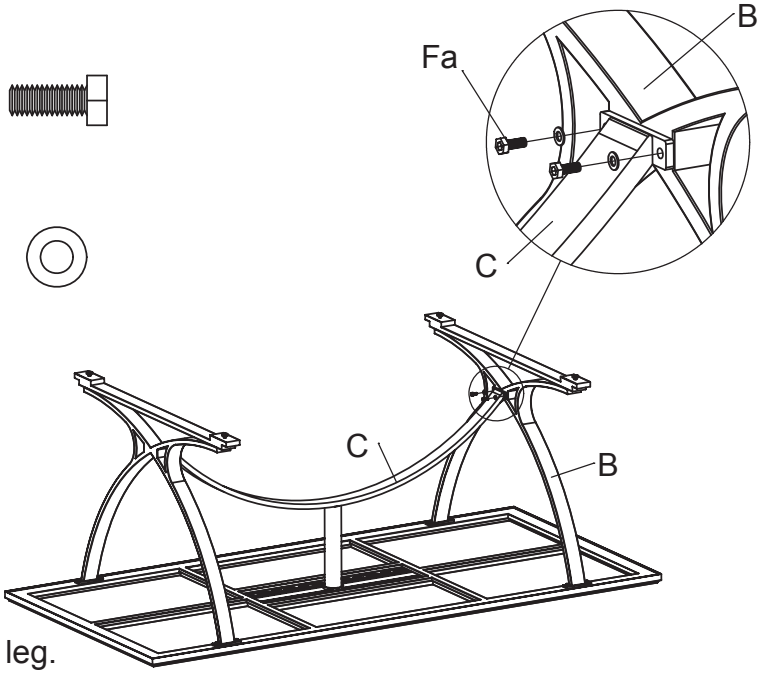

Don’t tighten completely.
Repeat procedure for the other leg.

4

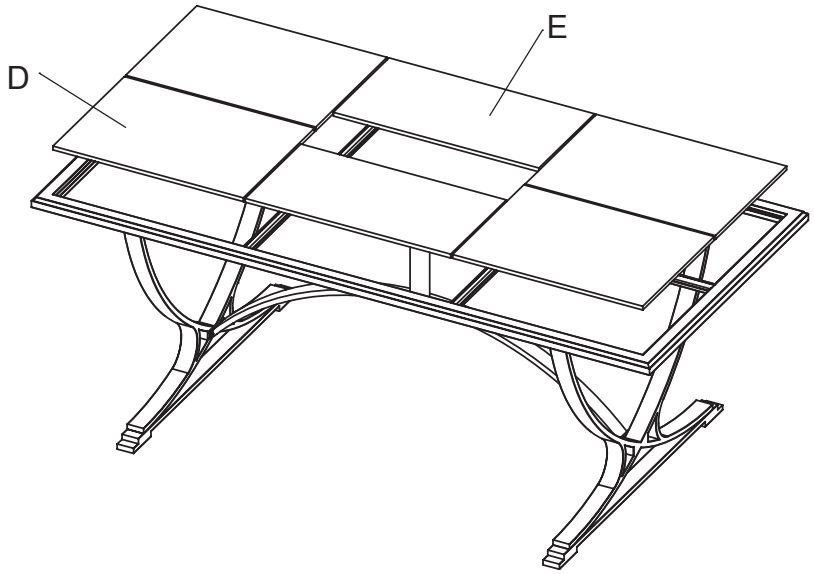

Securely tighten all bolts.
You can readjust the level by twisting knobs on the bottom of the legs as desired.
Your dining table is now ready to use.

CARE INSTRUCTIONS

Wash with a mild solution of soap and water; rinse thoroughly. Dry completely. Do not use bleach or solvents.

Cover furniture with outdoor furniture covers when not in use.

sears

Please refer to part numbers when reordering

For questions or comments about product:
Call toll-free: 1-800-457-4652

Made in / Hech en CHINA
Distributed by Sears, Roebuck and Co., Hoffman Estates, IL 60179

See our extensive assortment of outdoor living products
on-line at www.sears.com and www.kmart.com